



creatorseries
XZ-1
 i.Zuiko lens

Unleash your creativity with the XZ-1. Designed for those who want the quality of an SLR in a point-and-shoot format, the XZ-1 opens up a new canvas for artistic expression.



Features

- High performance DIGITAL Lens**
 With an aperture of F1.8-2.5, this is the brightest lens in a compact digital camera, making photography in natural light easy. The i.ZUIKO DIGITAL lens featured in the XZ-1 meets the same quality demands of high performance ZUIKO DIGITAL lenses developed for DSLR cameras.
- Large, High-Sensitivity 1/1.63 inch sensor**
 The larger than usual, high sensitivity CCD sensor provides outstanding image quality and excellent high ISO performance.
- TruePicV Image Processor**
 The XZ-1 uses the same TruePic V image processor used by high-end Olympus PEN and DSLR cameras. It offers superior image quality and superb colour reproduction by maximising the performance of the high-resolution lens and powerful CCD sensor.
- 3 inch OLED monitor**
 Because OLED monitors emit their own light, users will see deeper, richer shades and tones while reviewing photos and movies. The imaging power of this monitor is characterized by vivid color reproduction, high levels of contrast, and the ability to view easily outdoors.
- Unleash your creativity with Art Filters**
 The XZ-1 features six creative Art Filters that instantly enhance your photos and High-Definition movies.



10 MEGAPIXELS Hi-Sens. F1.8 3.0" 610K dots OLED MONITOR 6400 HIGH ISO LED ILLUMINATOR



PRODUCT CODE
175853 XZ-1 BLK
175877 XZ-1 WHT

creatorseries

XZ-1


i.Zuiko lens



NEW




Additional Technology

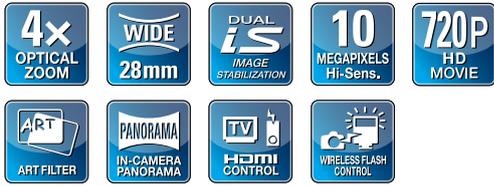

creator

Features

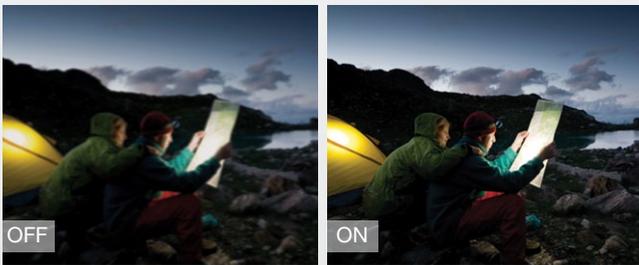

Low Light Mode. The camera automatically adjusts ISO sensitivity up to ISO 6400 to take sharp, full-resolution photos in dark places.



f1.8 i.Zuiko Lens. With a minimum aperture of f1.8 at wide-angle, this lens boasts super-fast shutter speeds for sharp, low-light images.

Easy Operation

With a control ring on the front and a wheel controller on the back, the XZ-1 gives immediate access to the most important manual settings like ISO, aperture, and shutter speed to make it easy to adjust the camera on the move.



In the box

- XZ-1 Digital Camera
- USB Cable & Charger (F-2AC)
- Audio/Video Cable
- Lithium-Ion Battery (LI-50B)
- Instruction Manual & Software CD
- Neck Strap
- Warranty Card

Available colours



175853 BLACK



175877 WHITE

Accessories



FL-14
Electronic flash
170001



VF-2
Electronic viewfinder
Black 171862
Silver 173101



MAL-1
Macro arm light
177123



SEMA-1
External stereo
microphone
174634



PT-050
Underwater
housing
177918



LI-50B
Lithium ion
battery
162396

Specifications



XZ-1

Sensor type	CCD High Sensitivity
No. of effective mega pixels	10M
Removable memory	SD/SDHC/SDXC
Internal memory (for shooting)	54MB
Recording image size (pixels)	MAX. 3648x2736 MIN. 640x480
Lens focal length (35mm camera equivalent)	28-112mm
Optical zoom	4x
Digital zoom (total zoom ratio in still mode (optical x digital))	16x
Focus range	Normal W:0.6m-∞ Macro W:0.1m-∞ / T:0.3m-∞ Super macro 0.01m-0.6m
LCD monitor	Type OLED Size (inch) 3.0 Inch No. of pixels (approx) 610,000
Maximum ISO sensitivity	6400
Magic Filter	Pop Art, Soft Focus, Grainy Fim, Pin Hole, Diorama, Dramatic Tone
Body in panorama	Yes
3D Photos	-
Image stabilizer	Imager shift
AF mode	Single AF(AF), Manual (MF), Macro mode, SuperMacro mode. AF tracking (TR)
AF Tracking	Yes
Face Detection (Faces may not be detected correctly in some cases)	Yes
Pet Detection	-
Shadow Adjustment Technology	Yes
Movie recording with sound	AVI Motion JPEG
Movie recording size (pixels)	1280x720, 640x480
Battery	LI-ion rechargeable battery (model) LI-50B AA battery (no.of batteries) -
HDMI (type)	Yes(Type D) * Connection cable is optional.
GPS	-
Dimensions(mm) (CIPA guideline compliant)	110.6x64.8x42.3mm
Weight (g) (Including batteries/card) (CIPA guideline compliant)	275g